 


WARNING:

- Contains small parts, sharp points and edges.
- Adult assembly required for assembly.
- Two adults recommended for assembly.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- Adult supervision recommended.
- Clean with a moist cloth.

PART LIST



HARDWARE




X4



TIP!
DO NOT FULLY
TIGHTEN SCREWS
UNTIL ALL SCREWS
HAVE BEEN LOOSELY
POSITIONED.

**BEFORE
ASSEMBLING,
MAKE SURE THERE
ARE NO
MISSING PARTS.**

NOTICE:
ELECTRIC DRILLS MAY BE USED FOR
ASSEMBLY.
ENSURE APPROPRIATE SIZE DRILL BITS
ARE USED. AND DRILL IS USED ON A
SLOW AND LOW TORQUE SETTING.

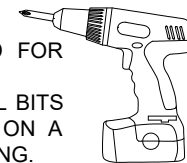

1

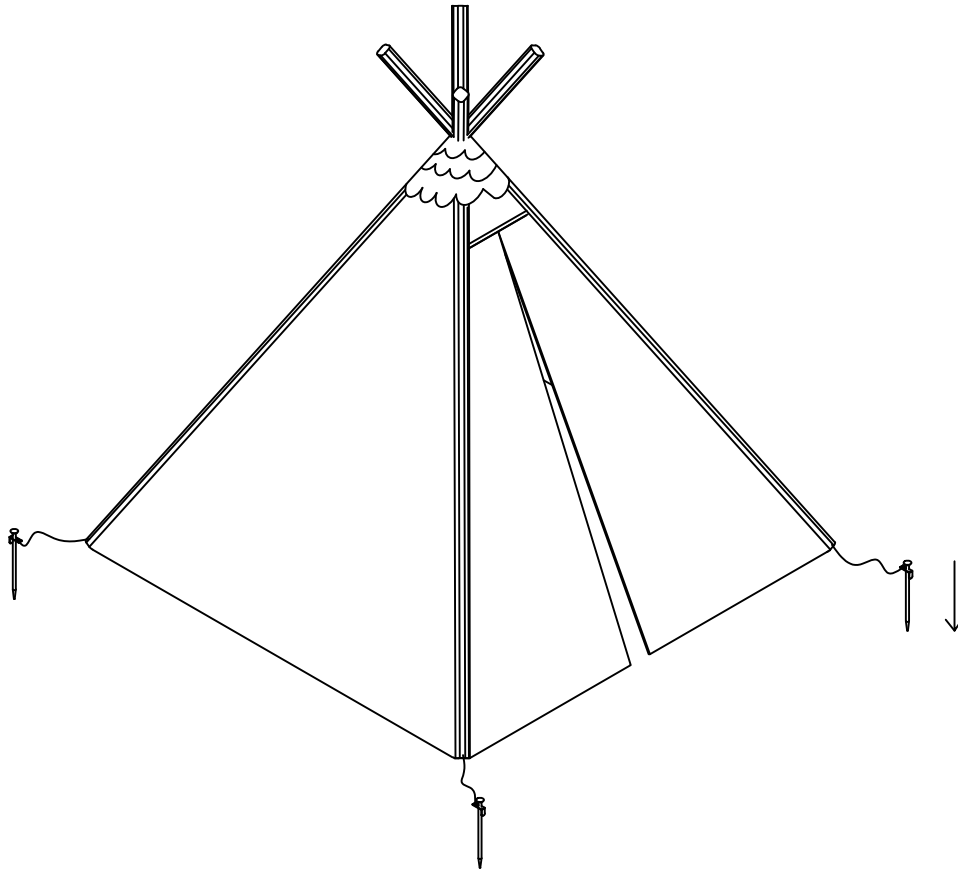 

CAUTION:

- Do not allow children to climb on shelves.
- Do not use as a ladder or cart.

CARE AND CLEANING

- Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.
- Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.
- Check for loose or worn parts periodically and tighten or replace as necessary.

1 YEAR LIMITED WARRANTY

Our products will supply to the original owner, without charge, any part discovered to be missing at the time of purchase or found to be defective during the 1-year warranty period. The warranty begins on the date of purchase. The model number and the part description must be owner damage, product alteration, or unreasonable use. If you need assistance, contact Us.

Record the manufacture date here. Information is located on a label enclosed, and on the shipping carton. Place label and this sheet in an accessible place.

Model Number: **HW1-S245**

Manufacture Date: _____

Fasten your Hex Key Tool in the box below and keep in a convenient place for future use.



Note: when used outdoors, the grass or sand land is nailed at the four corners!

Note: the use of fixing devices is to prevent the risk of strong wind blowing down. Customers can choose whether to use it according to the actual situation.!