 
 
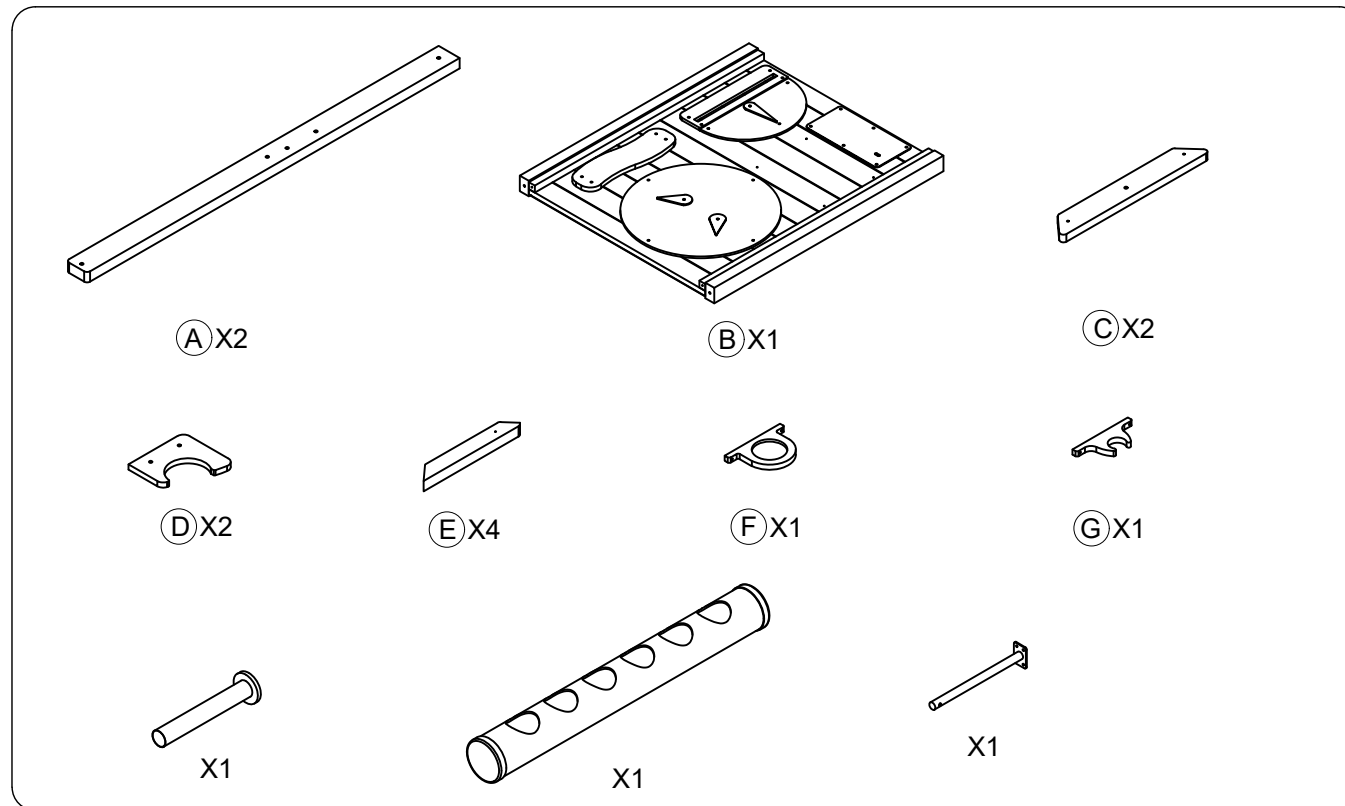 


**HW1-S599-A
Weather Station**

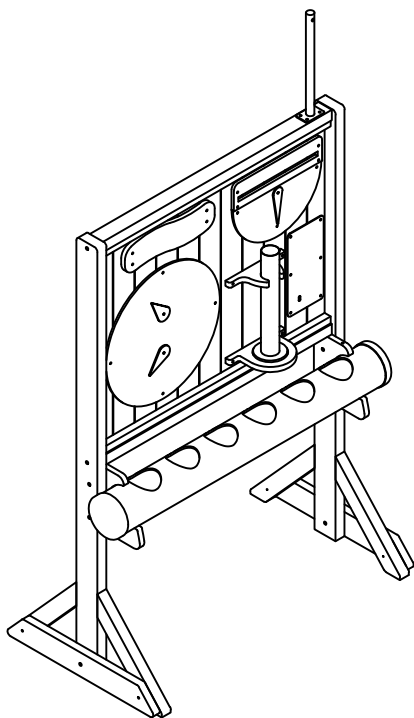

HARDWARE

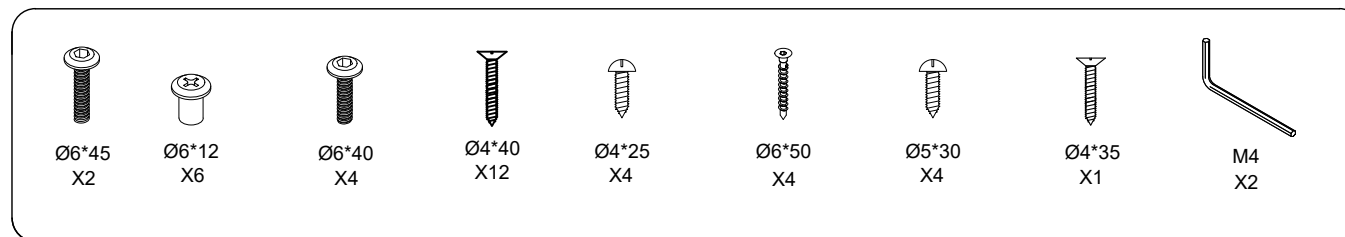

 
WARNING:

- Contains small parts, sharp points and edges.
- Adult assembly required.
- Two adults recommended.
- Do not stand, sit, kneel, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- Adult supervision recommended.

TIP!
DO NOT FULLY
TIGHTEN SCREWS
UNTIL ALL SCREWS
HAVE BEEN LOOSELY
POSITIONED.

**BEFORE
ASSEMBLING,
MAKE SURE THERE
ARE NO
MISSING PARTS.**

NOTE:
A ELECTRIC
SCREWDRIVER WILL
BE RECOMMENDED FOR
ASSEMBLY (NOT INCLUDED)

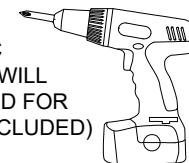


1 X2



Ø6*45
X2



 
Ø6*12
X2

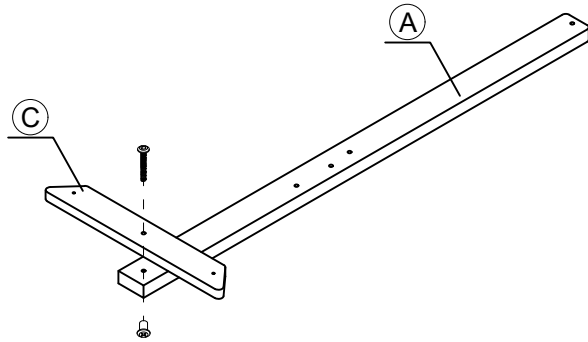

2 X2



 
Ø4*40
X12

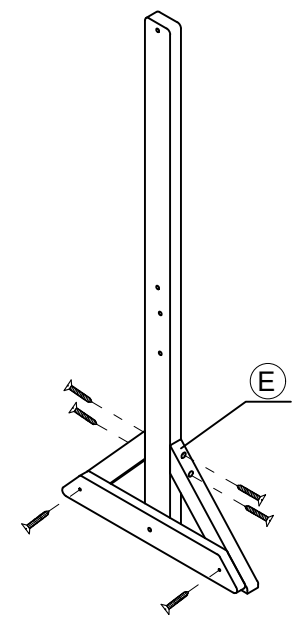

3



 
Ø5*30
X4

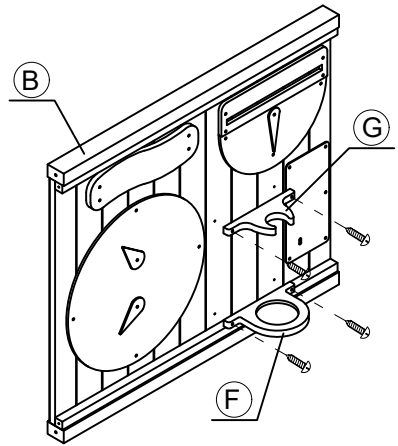

4




 Ø6*50
X4

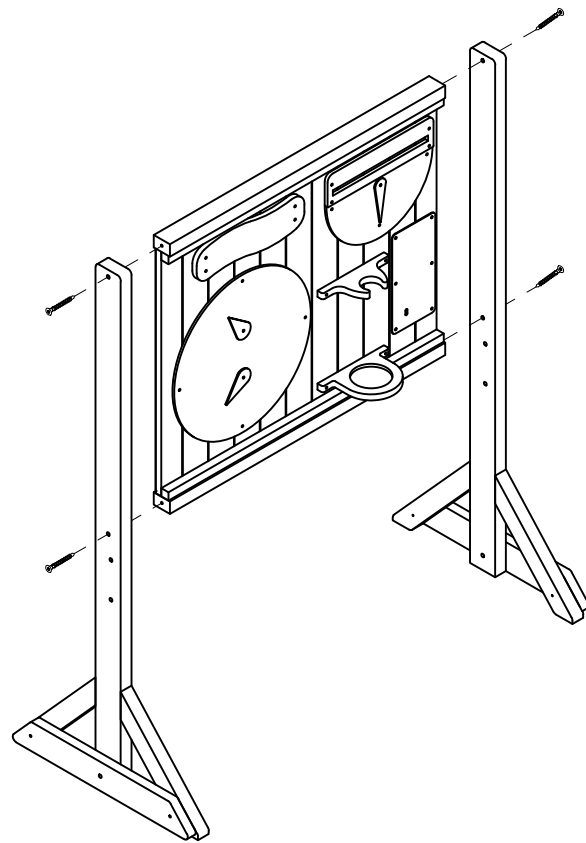

The single item is portable and can be used free standing (without ground anchors) - adult supervision advised, if preferred the item can be fixed in place with 1 set of 2 ground anchors for grass/soil base (anchors supplied)

 5

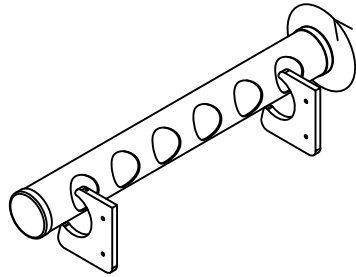

Put the opening of the plant planting pipe on the PE board, and then rotate it into the slot.

 
6



Ø6*40
X4



Ø6*12
X4

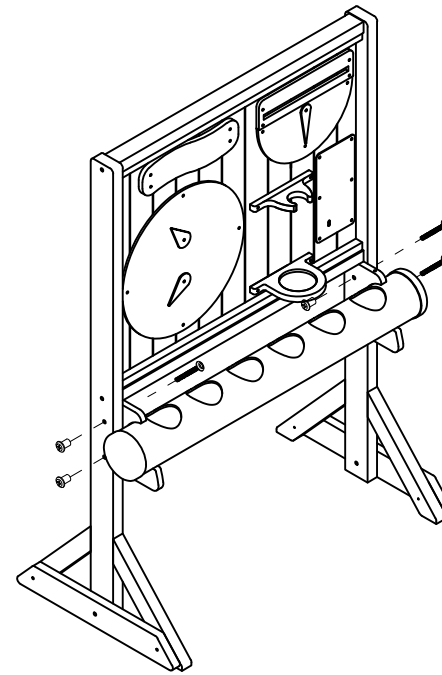



7



Ø4*25
X4



  Ø4*35
X1

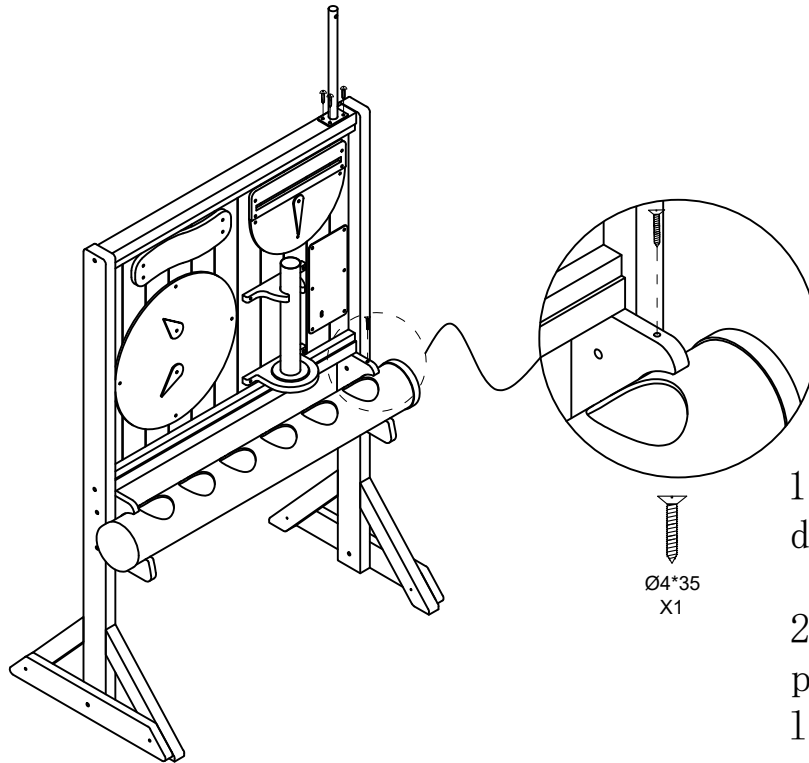

Ø4*35
X1

1. The measuring cylinder should directly stick into the slot.

2. Rotate the opening of the plant tube to the top and then lock the tapping screws



CAUTION:

- Do not allow children to climb on shelves.
- Do not use as a ladder or cart.

CARE AND CLEANING

- Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.
- Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.
- Check for loose or worn parts periodically and tighten or replace as necessary.

1 YEAR LIMITED WARRANTY

We will supply, without charge, any part discovered to be missing at the time of purchase or found to be defective during the 1-year warranty period. The warranty begins on the date of purchase. We will replace without charge any part found to be missing at the time of purchase, damaged on delivery or defective during the first year of use.

This warranty does not cover any damage caused by accident, improper care, negligence, normal wear and tear, surface corrosion on metal parts, discoloured surfaces and other cosmetic issues or failures due to misuse or vandalism. Natural changes in wood over time are considered cosmetic issues and are not covered.

Record the manufacture date here. Information is located on a label enclosed, and on the shipping carton. Place label and this sheet in an accessible place.

 
Model Number: HW1-S599-A
Manufacture Date: _____

Fasten your Hex Key Tool in the box below and keep in a convenient place for future use.

1. Firstly determine the coordinate points that need to be fixed to the product. With the digging tool, dig 46CM downward the grass, bury the grass anchor, then tamp the soil.
2. Fixed the product on a suitable position, use the fabric loop to hook the grass anchor and fix the fabric loop to the suitable position with M4*25 tapping screws to complete the installation.

To easily get the ground anchor into the ground, simply insert the pointed end into the ground - these anchors are called screw in anchors. The round disc ensures that you have a lot of grip in the ground so that the anchor can easily be screwed deep into the ground. It is best to use a screwdriver (or small metal bar) or other long object about 5-6 millimetres thick to rotate the anchor. You push this through the ring, which is attached to the top, after which you simply turn the anchor around and drill into the ground. Make sure to leave about 6 to 7 cm above the ground at the top so that you have enough room to attach the ground anchor to the post.

Then place the supplied screw through the ring and drill it to the post.

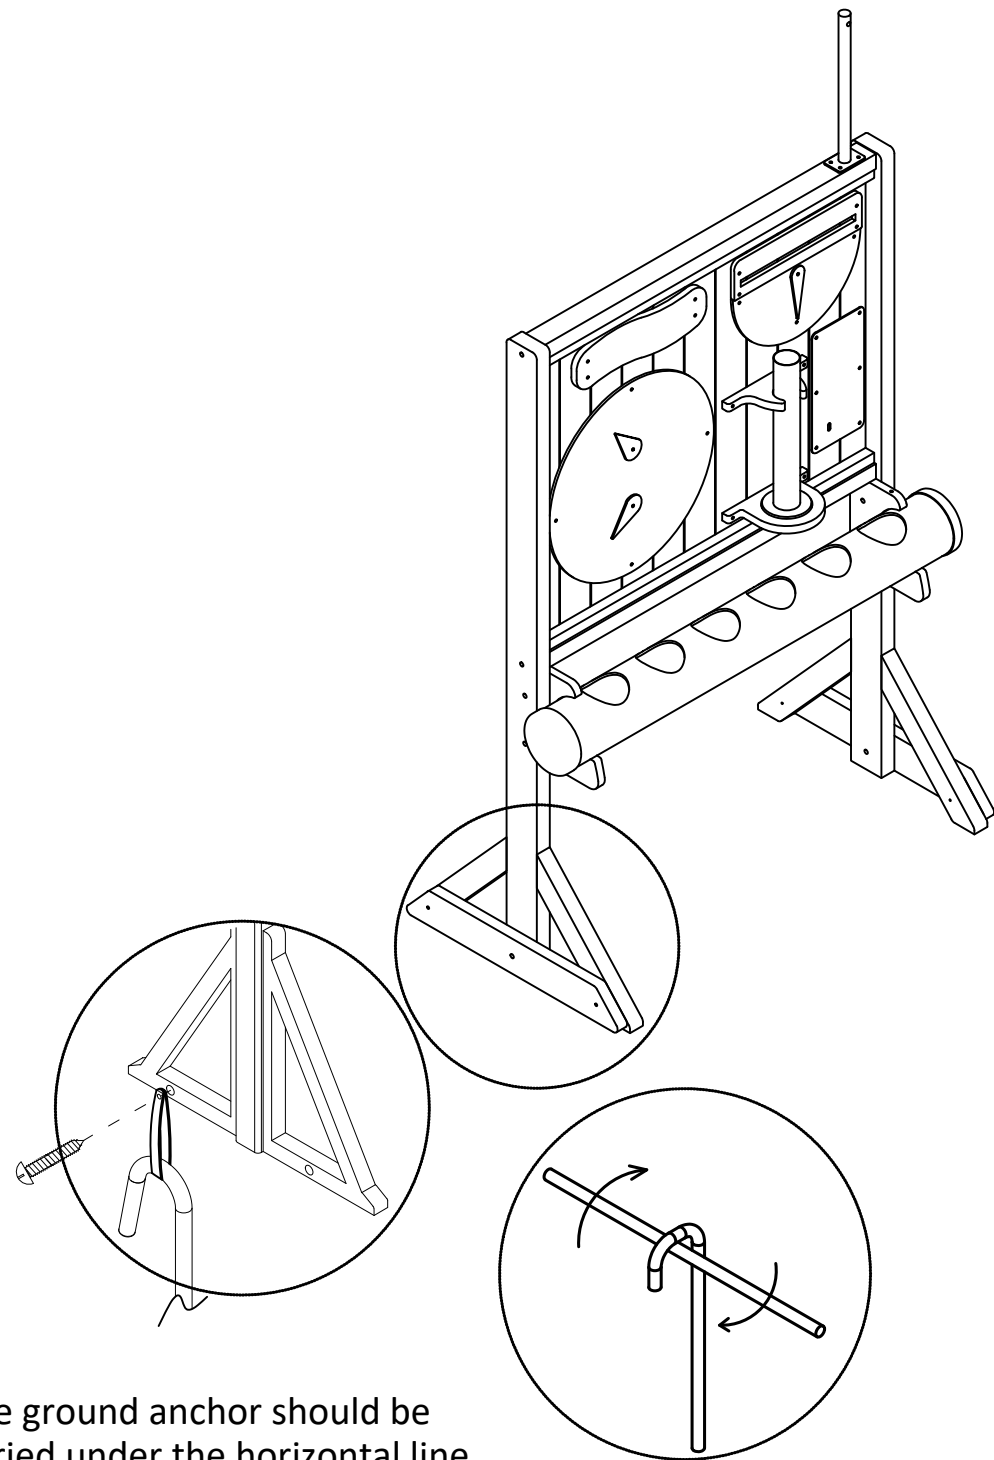


The ground anchor should be buried under the horizontal line as photo indicated.

The anchors are not supplied with this item

Instuction of anchor for grass ground

 - 1) Firstly determine the coordinate points that need to be fixed to the product. With the digging tool, dig 46CM downward the grass, bury the grass anchor, then tamp the soil.
- 2) Fixed the product on a suitable position, use the fabric loop to hook the grass anchor and fix the fabric loop to the suitable position with M4*25 tapping screws to complete the installation.

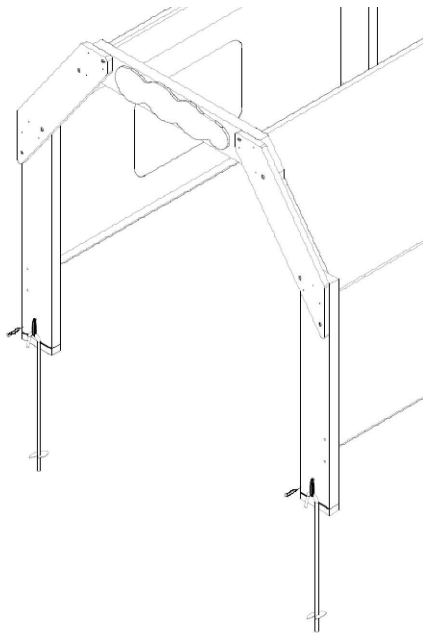

Instuction of anchor for cement floor

- 1) Firstly determine the coordinate points that need to be fixed to the product, and use the electric drills with M10 drilling bit to drill downward the cement floor to a depth of 10-12CM.
- 2) Place the product that needs to be fixed in a suitable position, and fix it on the ground with an L-shaped corner connector and M8*100 expansion screws.
- 3) Use M4*25 tapping screws to connect the L-shaped corner connector to the corresponding position to complete the installation.

