

#### **Tools**

**Philips Screwdriver** 

Allen Key (supplied)

#### **Check List**

Familiarise yourself with the contents

**Check there is nothing missing** 

Check you have all the tools required


Make room to assemble the product

# **Assembly Instructions**

#### 12 SECTION LITERATURE ORGANISER

Code: AB444

Before starting to assemble this unit please read the step by step assembly instructions carefully.

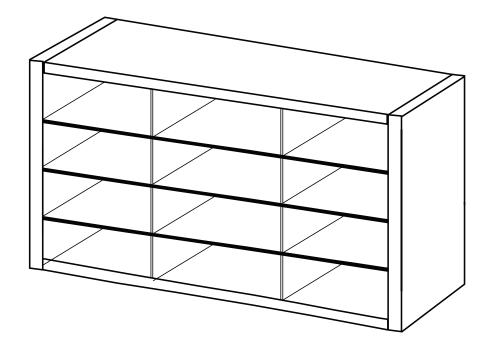




Components	Quantity
Confirmat Screws	12
Screw Caps	12
Trims	3
3⁄4" Nails	40
Allen Key	1

Panels	Quantity	Size (mm)
END A	2	312x300mm
ТОР/ВОТТОМ	2	704x300mm
BACK C	1	725x305mm




### Step 1

Secure ends A to top and bottom using (12) Confirmat Screws.

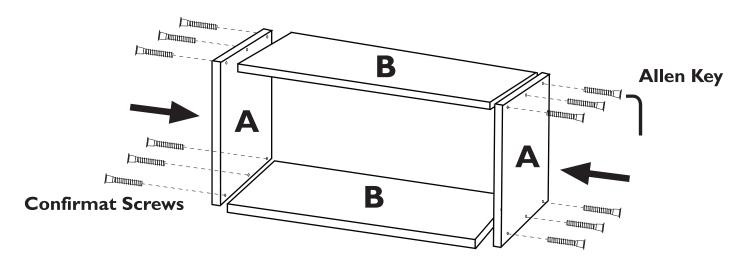


# Step 2

Slot cardboard partitions together as shown.

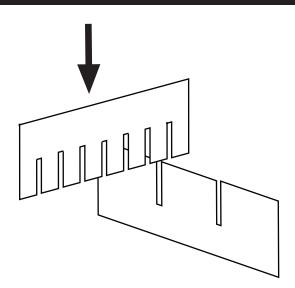


### Step 3

Position end partitions - flex partition 'tails' inwards.

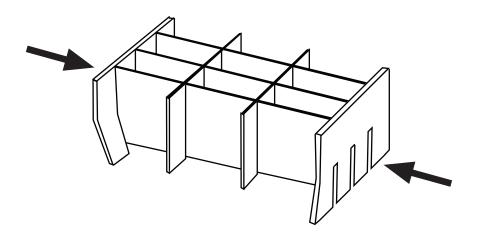

# Step 4

Position unit face up on floor. Lower partition assembly into the unit and slide a channel on to partition before partition is flush with ends.

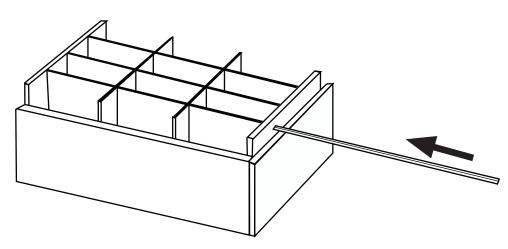



# Step 5

Carefully turn unit over. Position back panels as shown and secure with nails.

