

Tools

Allen Key (supplied)

Check List


Familiarise yourself with the contents Check there is nothing missing Check you have all the tools required Make room to assemble the product

Assembly Instructions

Corner Filing Unit

Code: CFU-2

Before starting to assemble this unit please read the step by step assembly instructions carefully.

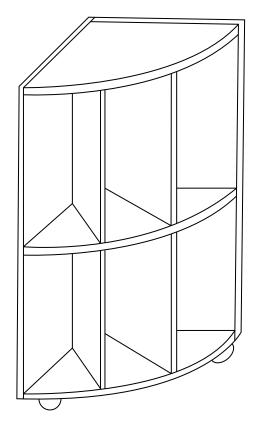

Contact Number 0151 479 3030

Components Confirmat Screws

Castor- Lockable

Castor- Freewheel

1/2 x 8 Screw

Allen Key

30mm x 6mm Dowel

Metal Connecting Bolts

Glue

IMPORTANT: APPLY A SMALL AMOUNT OF GLUE INTO DOWEL HOLES BEFORE DOWELS ARE INSERTED

Contact Number 0151 479 3030

Quantity

12

2


2


16

1

16

2

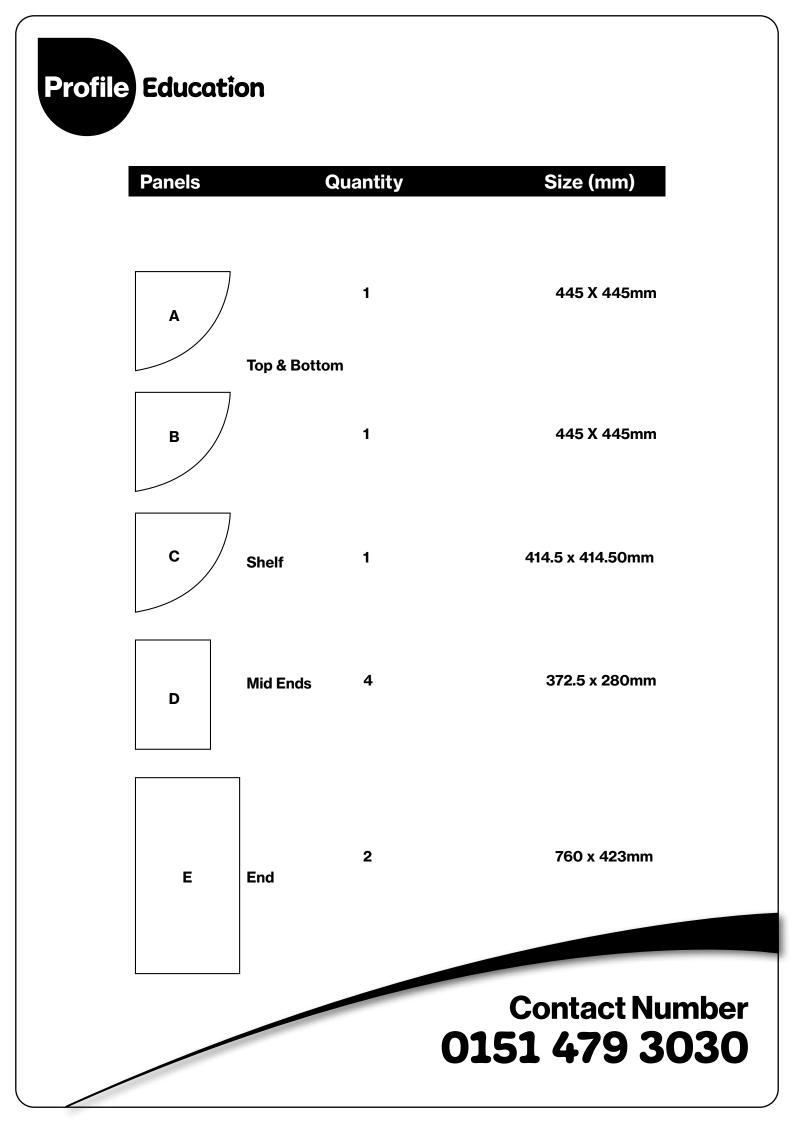

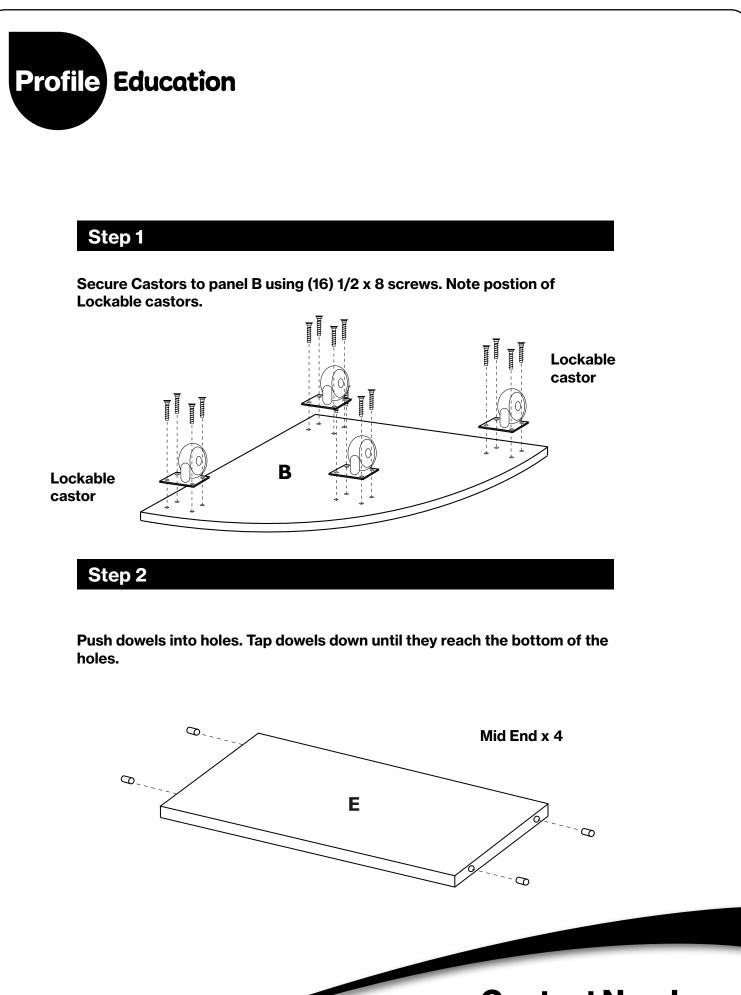


Contact Number 0151 479 3030




Step 3

Secure end to back panel using (2) confirmat screws.

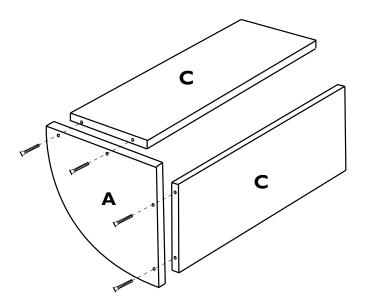

Step 4


Lay assembly on back. Secure bottom to end using (2) confirmat screws.

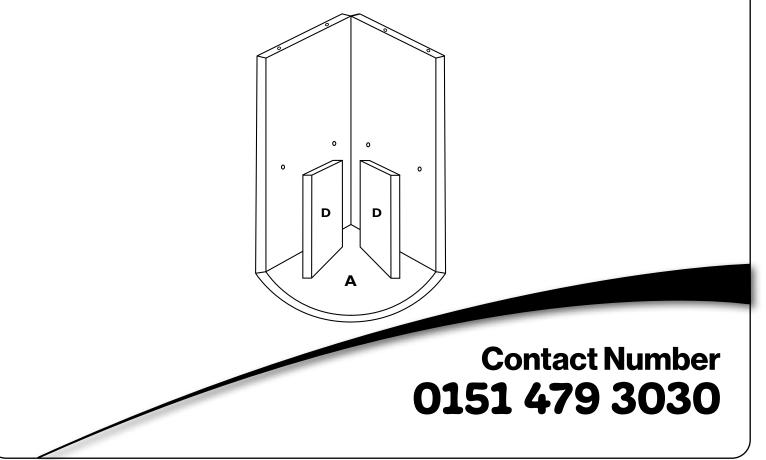




Step 5

Fit Shelf C onto dowels in Mid Ends D and secure with 4 confirmat screws.

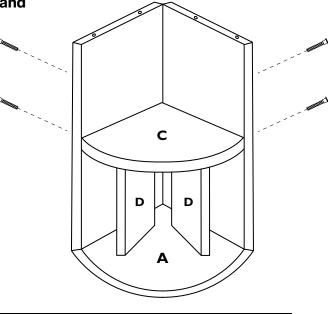


Step 6

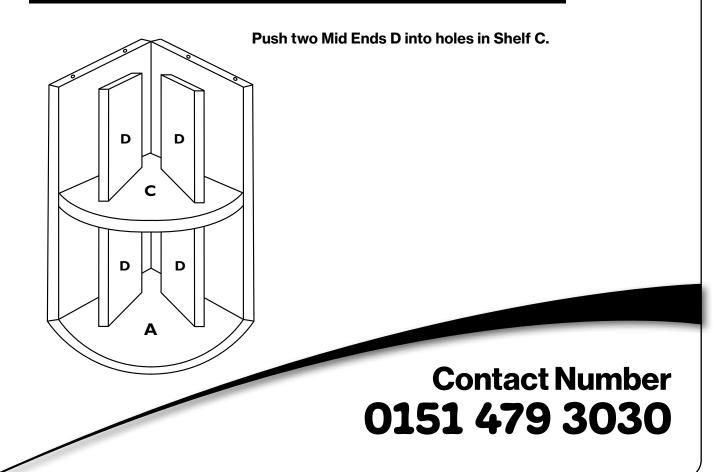



Step 7

Position Bottom B onto dowels in Mid Ends D and secure with (4) Confirmat screws.

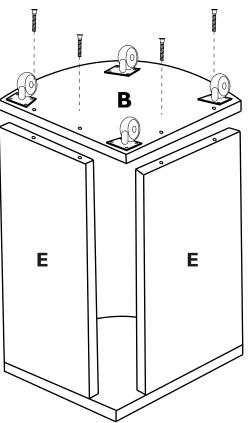

IMPORTANT: If using filing units side by side, ensure Top A is fitted so that the grain effect falls in the same direction. Units can then be bolted together through ends using connecting bolts.

YOUR UNIT IS NOW COMPLETE

Should you come across any problems, please call the helpline below.

Contact Number 0151 479 3030



Castor Template

Use in 3 corners and centre of bottom Panel B.

