

Tools

Philips Screwdriver



Allen Key (supplied)



Check List

Familiarise yourself
with the contents



Check there is nothing
missing



Check you have all the
tools required




Make room to assemble
the product

Assembly Instructions






Mobile Fold Away Bookcase

Code: MFAB

**Before starting to assemble this unit please read
the step by step assembly instructions carefully.**

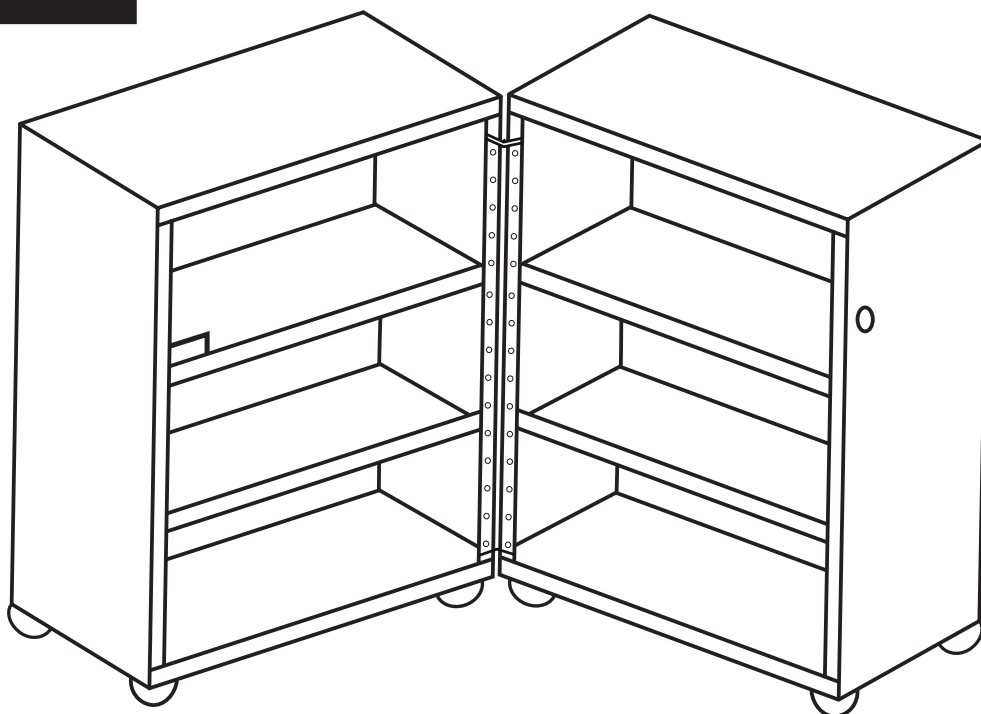

Contact Number
0151 479 3030

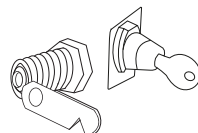Components**Quantity****Confirmat Screws****24****Castor- Lockable****4****Castor- Freewheel****4****1/2 x 8 Screw****32****Allen Key****1****Buffer Pads****2****Piano Hinge****1****Striker Plate****1****5/8 x 4 Screw****32****Complete Lock Hooked Plate****1****30mm x 6mm Dowel****16****Glue**

Contact Number
0151 479 3030




Panels	Quantity	Size (mm)
<div>End A B C</div>	4	945 x 300mm
<div>Top/Bottom D E</div>	4	600 x 300mm
<div>Shelf F</div>	4	569 x 282mm
<div>Back G</div>	2	569 x 945mm


Contact Number
0151 479 3030

Step 1

1. Push dowels into holes. Tap down to bottom of hole.

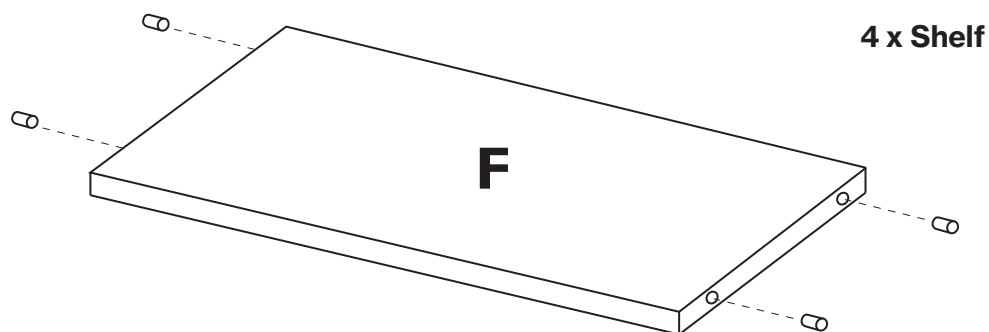

Step 2

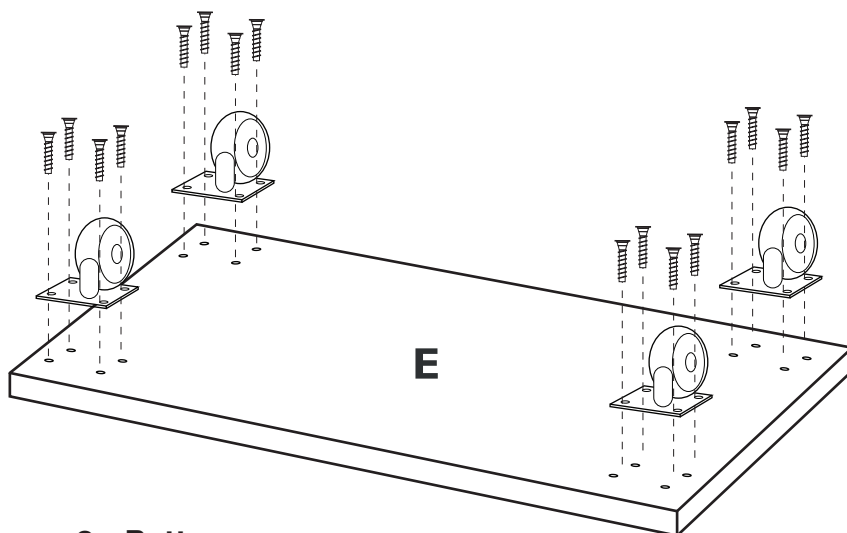


1. Secure 4 Castors to bottom using 1/2 x 8 screws into 'POP' marks (lockable castor to front or rear).

Contact Number
0151 479 3030

Step 3

1. Secure striker plate to shelf with 5/8 x 4 screws.

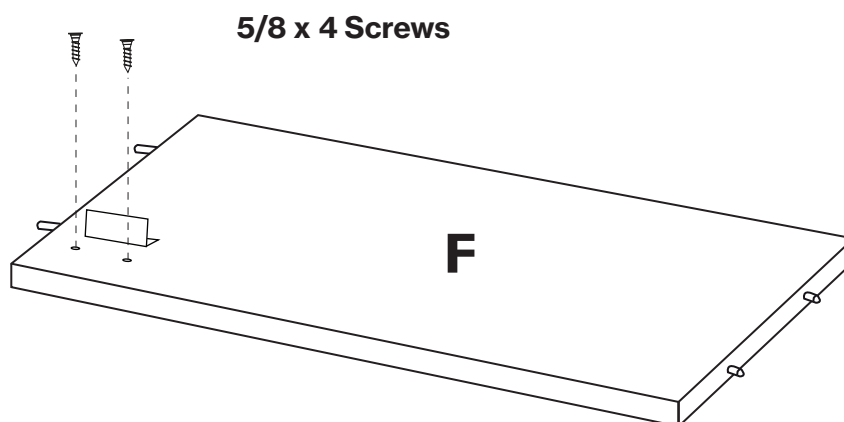


'POP marks' already in shelf.

Contact Number
0151 479 3030

Step 4


1. Secure bottom E to ends A&B with (4) confirmat screws.
2. Position shelves F into dowel holes.

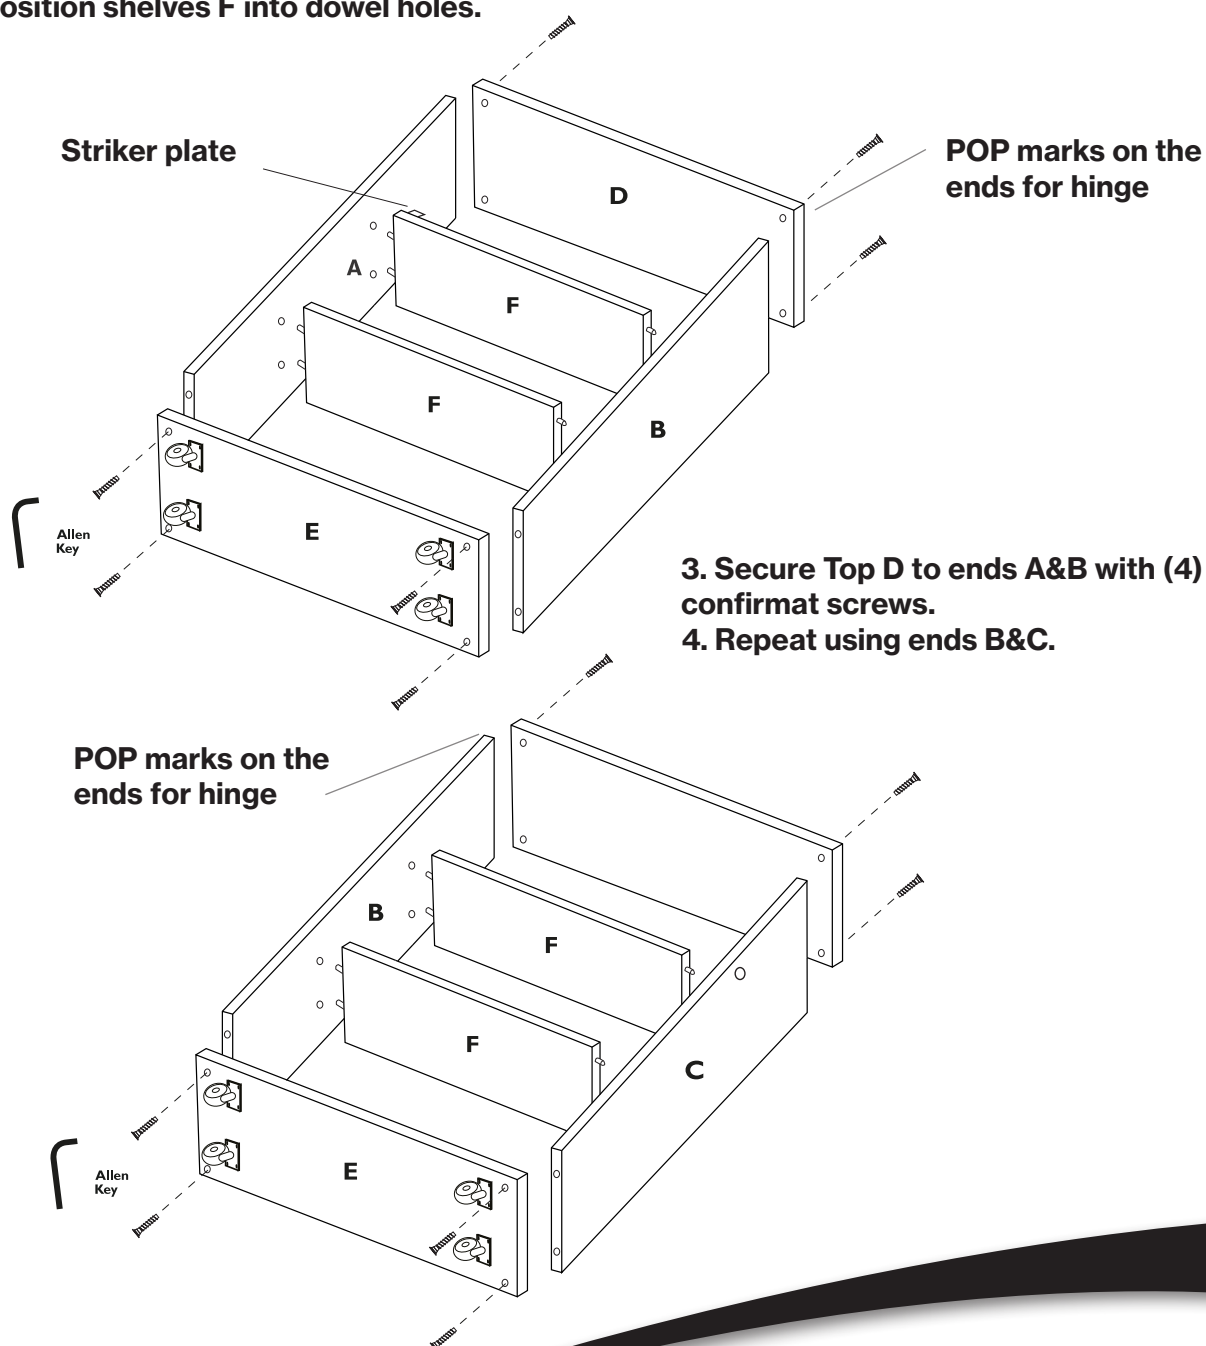

Contact Number
0151 479 3030


Step 5

1. Stand unit upright, or lay face down if you prefer.
2. Secure back Panel G with (4) confirmat screws to ends. Slacken top/bottom screws if necessary.

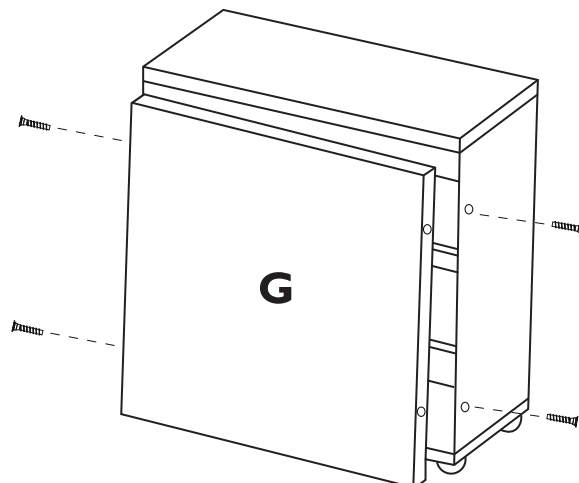


Contact Number
0151 479 3030

Step 6

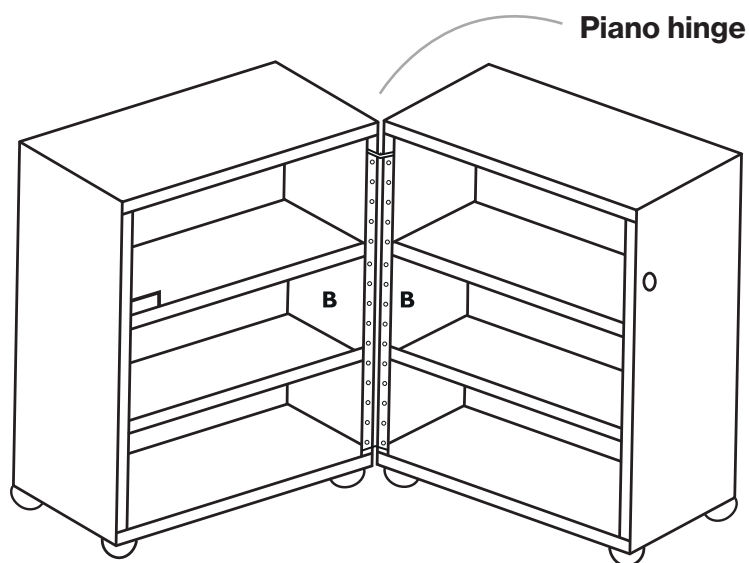


1. Position units as shown. Fit Piano hinge to ends B using (30) 5/8 x 4 screws.

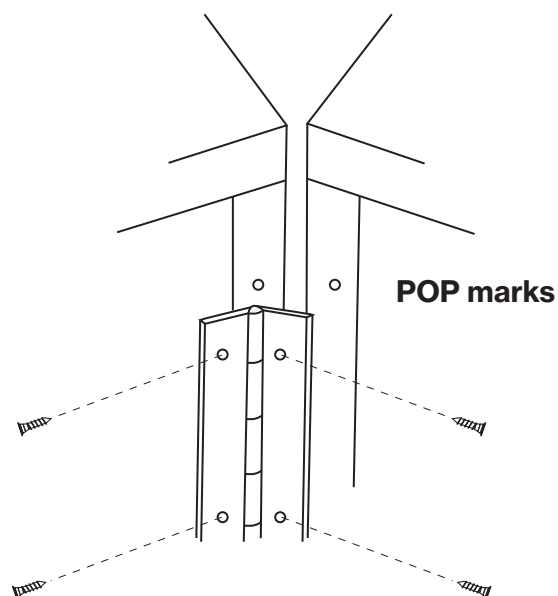

Contact Number
0151 479 3030

Step 7

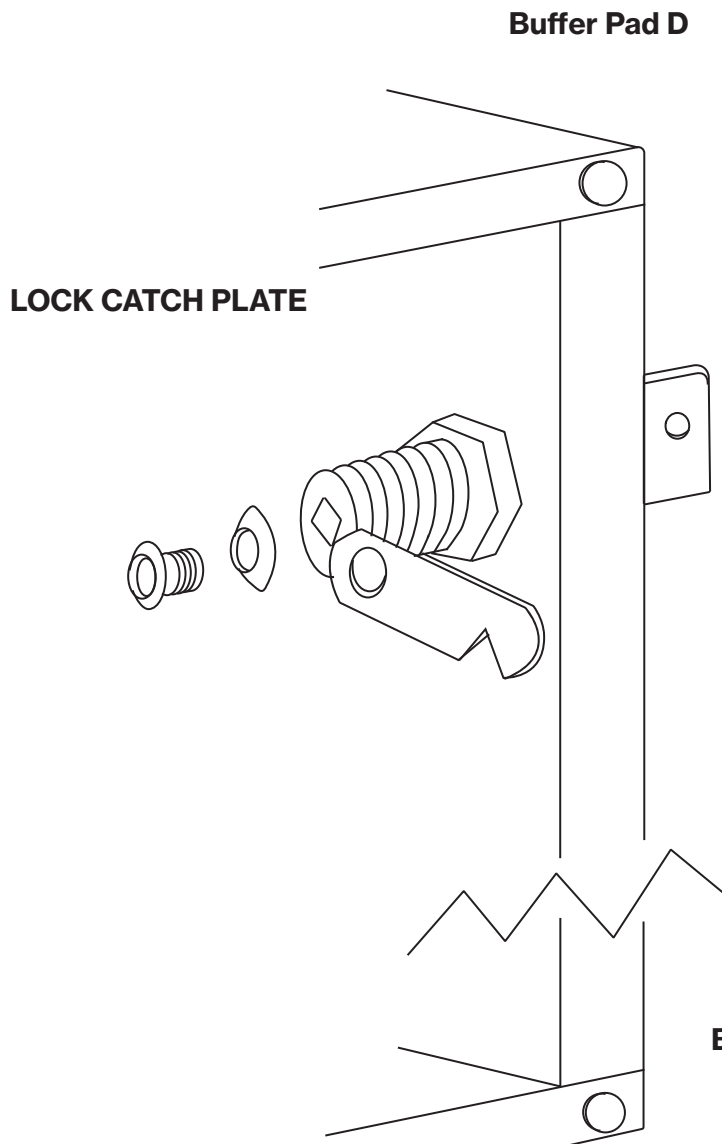

1. Remove screw and washer from key barrel (do not remove key) Insert barrel through hole in End C and secure with nut (ensure key is in the vertical position before tightening nut with spanner).

Position plate onto barrel as shown and secure with washer and screw.

2. Stick buffer pads (2) on Top D and Bottom E.

**YOUR UNIT IS NOW COMPLETE, SHOULD YOU COME ACROSS ANY ISSUES
PLEASE CALL THE HELPLINE BELOW**

**Contact Number
0151 479 3030**