


# Tools Philips Screwdriver Allen Key (supplied) Check List Familiarise yourself with the contents Check there is nothing missing Check you have all the tools required Make room to assemble the product

# **Assembly Instructions**

### **MAPLE BOOKCASE**

### Code: MAPREDBK and MAPBLUBK

Before starting to assemble this unit please read the step by step assembly instructions carefully

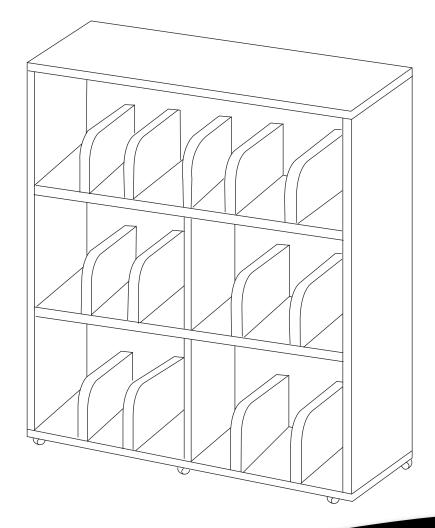

Help line **0151 479 3030** 




Components	Quantity
Conformat screws	46
I/2" x 8 Roundhead screw	24
Castor lockable	3
Castor freewheel	3
Label holder	3
6 x 30 dowels	4

<b>Panels</b>	Quantity		Size(mm)
A	End	2	1055x338mm
В	Тор	I	1170x350mm
С	Bottom	I	1170x340mm
D	Shelf	2	1139x320mm
E	Small dividers	13	280x155mm
F	Back	1	1065x1150mm
G	Large Dividers	2	341x280mm


**IMPORTANT** Panels lettered for identification if spare part is required. Please also state colour.



### Step I

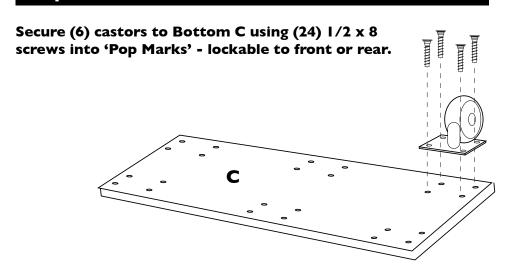

### Step 2

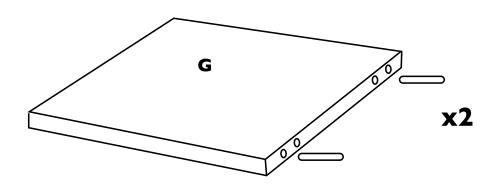


Insert (2) Dowels into Inner Holes in Dividers G

Help line 0151 479 3030




### Step 3

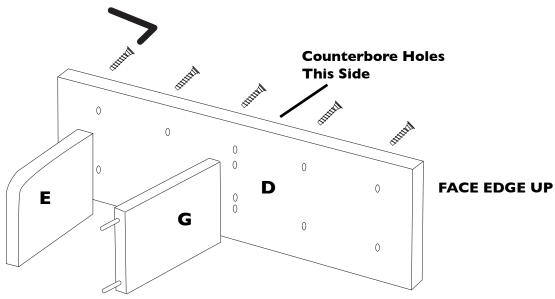

Secure 4 Dividers E and I Divider G to shelf D using (10) Conformat Screws

**GROOVE ON BOTTOM C ONLY.** 


### Step 4

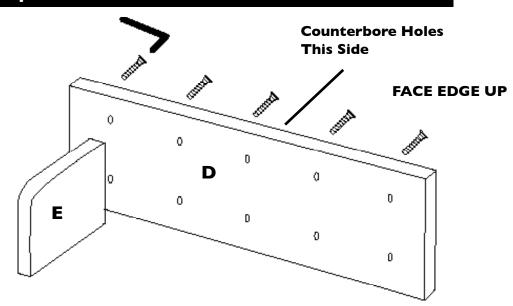

Secure 5 Dividers E to Shelf D using (10) Conformat Screws



### Step 5

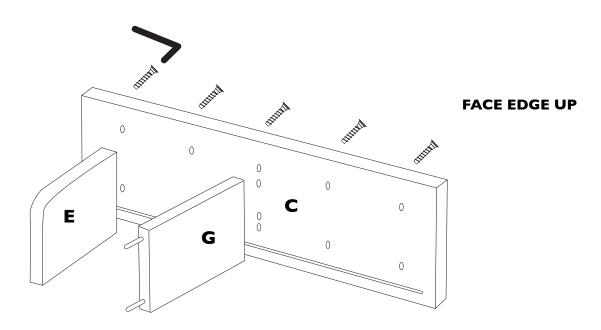


Secure 4 Dividers E and I Divider G to Bottom C using (10) Conformat Screws

Help line **0151 479 3030** 




### Step 6

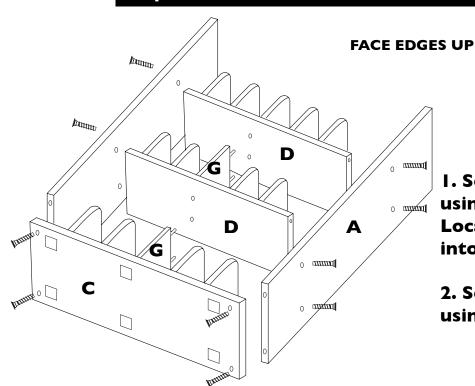

I. Secure Bottom C to Ends A using (4) Conformat Screws
Locate dowels in Divider G into Center holes in Shelves D

2. Secure Shelves D to Ends A using (8) Conformat Screws

### Step 7

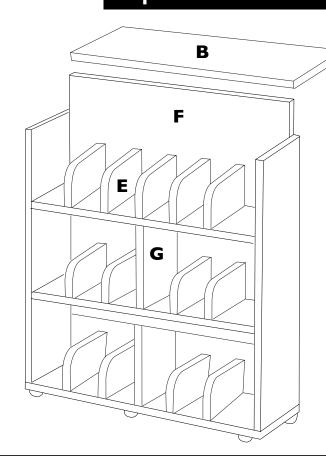

### **STAND UNIT UPRIGHT**

I. Slide Back F into Grooves in Ends A

PLEASE make sure the GLOSSY SIDE is on the OUTSIDE

- 2. Secure Top B with (4) Conformat Screws into Ends A
- 3. Peel off backing paper and stick label holder onto Shelves D and Bottom C