Profile Education

Tools

Philips Screwdriver

Allen Key (supplied)

Check List

Familiarise yourself with the contents

Check there is nothing missing

Check you have all the tools required
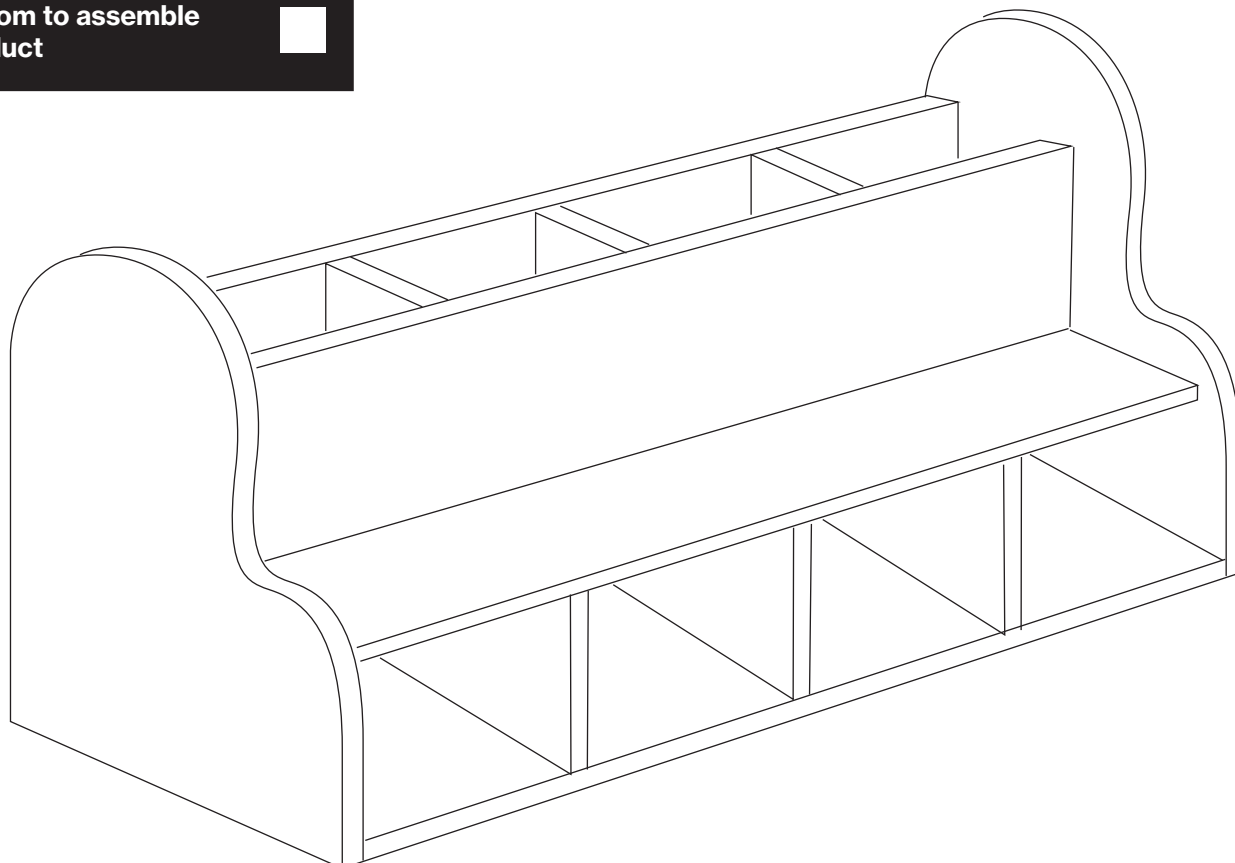
Make room to assemble the product

Assembly Instructions

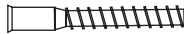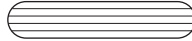## MAPLE SEAT AND BROWSER UNIT (SINGLE-SIDED)

Code: MAPSEATBROW1

Before starting to assemble this unit please read the step by step assembly instructions carefully.

Contact Number
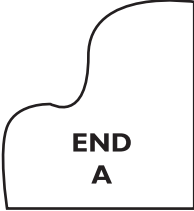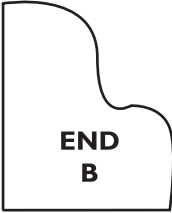# 0151 479 3030

Profile Education

Components		Quantity
Confirmat Screws		**33**
30 x 6mm Dowels		**32**
Clip On 'U' Channel		**4**
Allen Key		**1**

NB: Clip On can be put on bottom of unit if required

Contact Number
0151 479 3030

Profile Education

Panels	Quantity	Size (mm)
END A	1	600x550mm
END B	1	600x550mm
LARGE BACK C	1	1305x510mm
SMALL BACK D	1	1305x250mm
BOTTOM SEAT E/F	2	1305x505mm
TRAY DIVIDER G	3	498x180mm
BOOK DIVIDER H	3	220x240mm
PLINTH I	1	1305x50mm

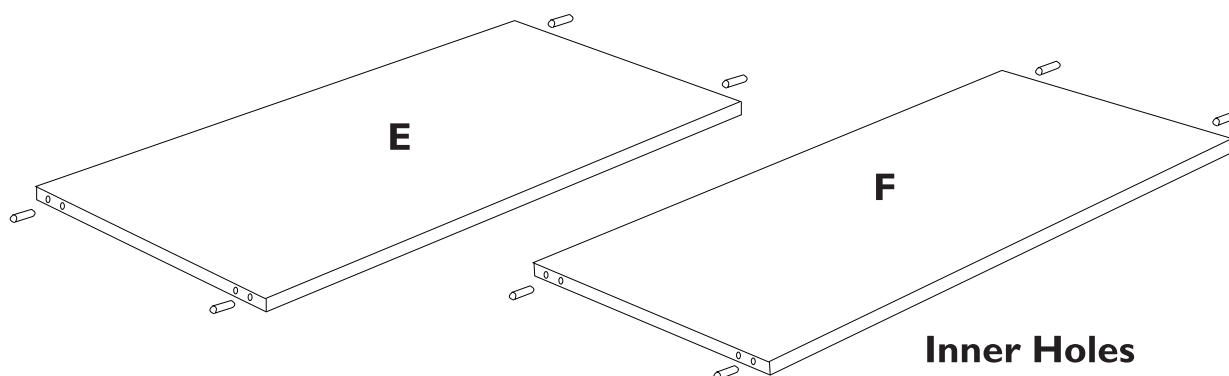**IMPORTANT Panels lettered for identification if spare part is required. Please also state colour.**

Profile Education

Step 1

Tap dowels to bottom of hole.

H x3

G x3

Outer Holes
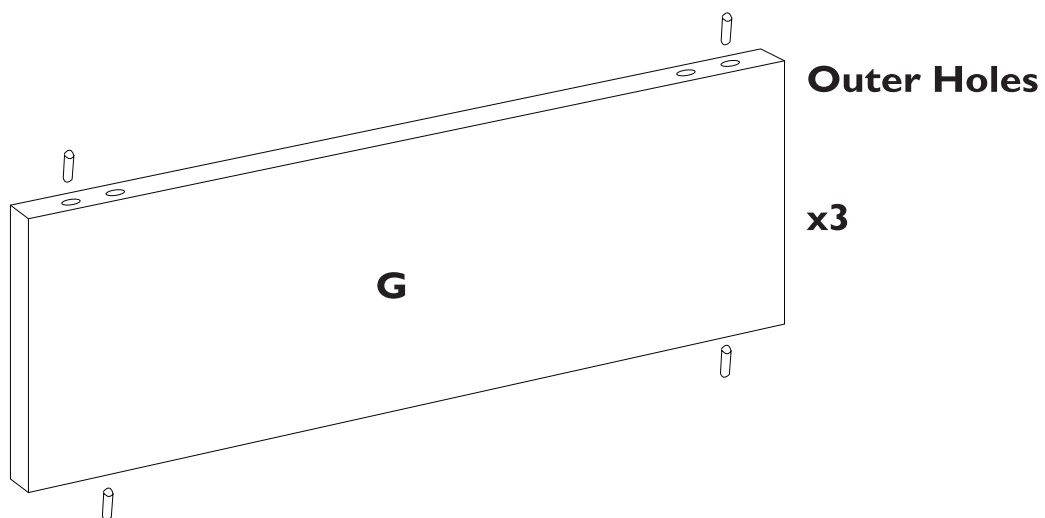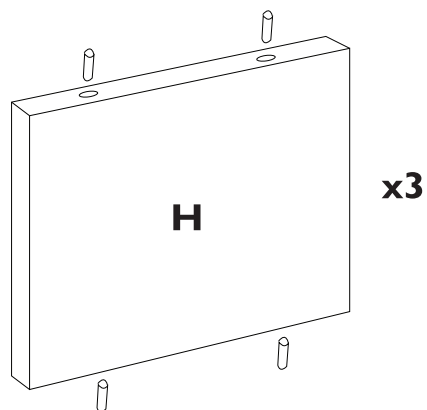
Step 2

Tap dowels to bottom of hole.

E

F

Inner Holes

Step 3

Secure Plinth I to Bottom E using (3) Confirmat Screws.

I

E
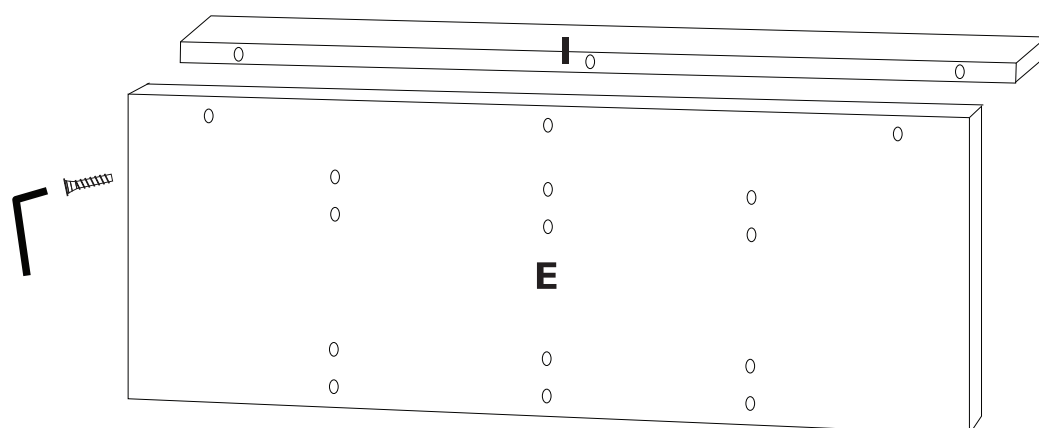
Step 4

Push Dowels in G into Dowel Holes in E.

Secure G to E using (6) Confirmat Screws.
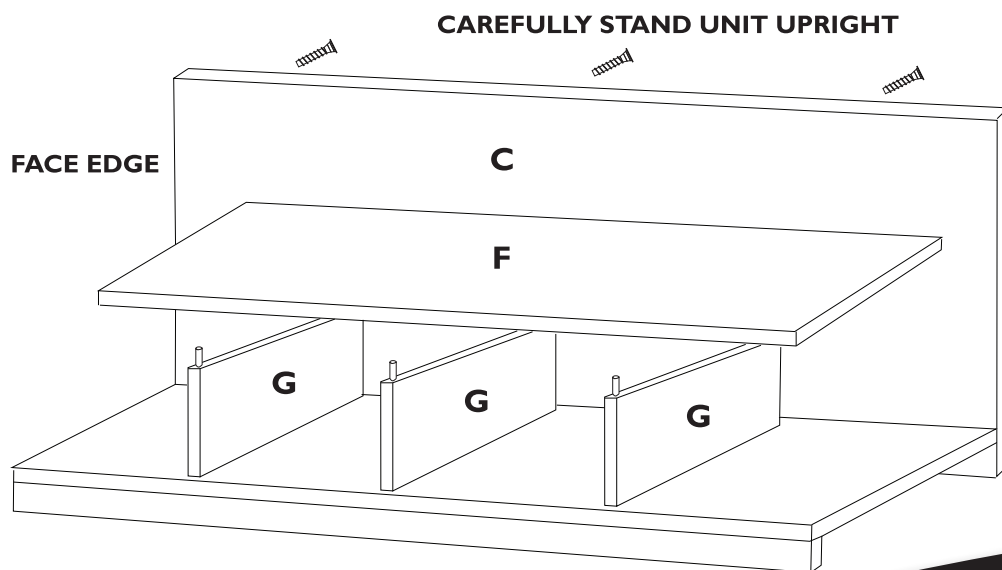
Profile Education
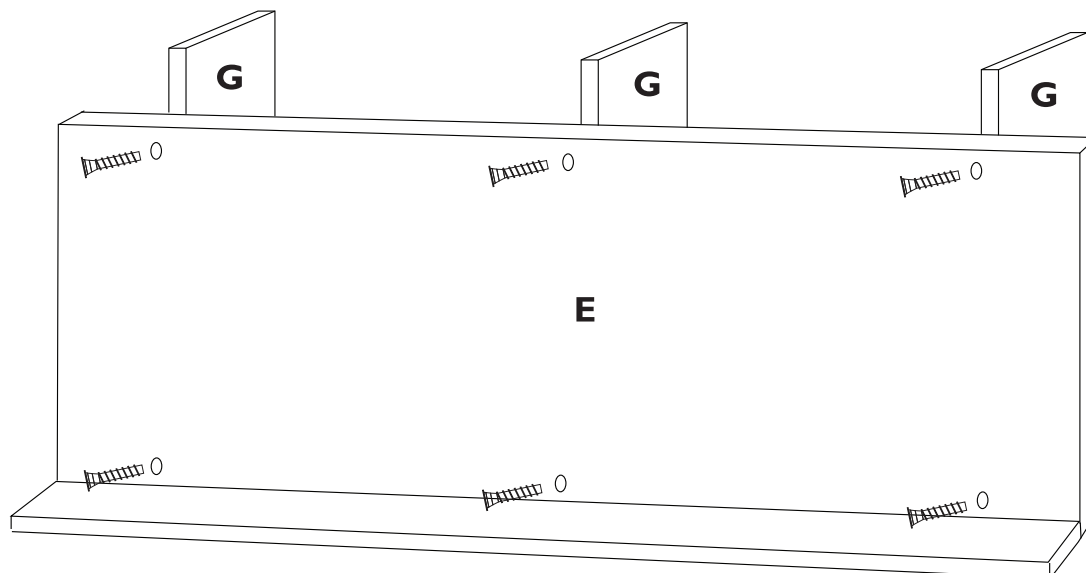
Step 5

Secure Large Back C to Bottom E using (3) Confirmat Screws.

C

E
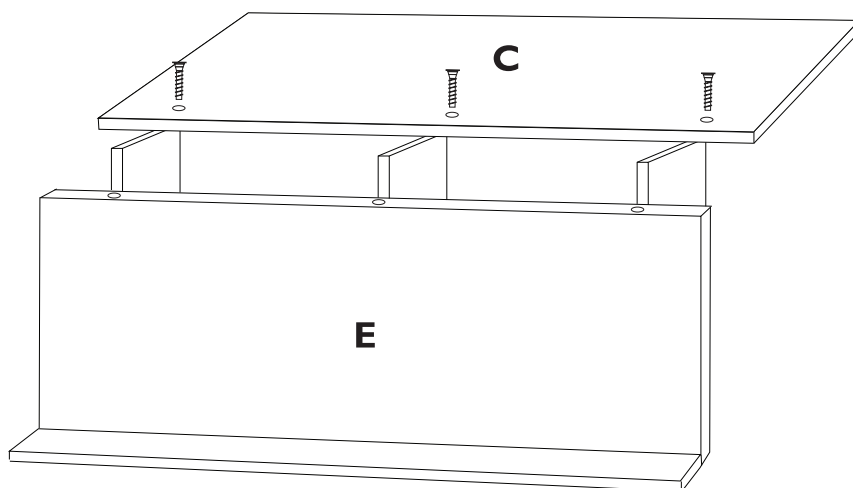
Step 6

Lower Seat F onto Dowels in Tray Dividers G.
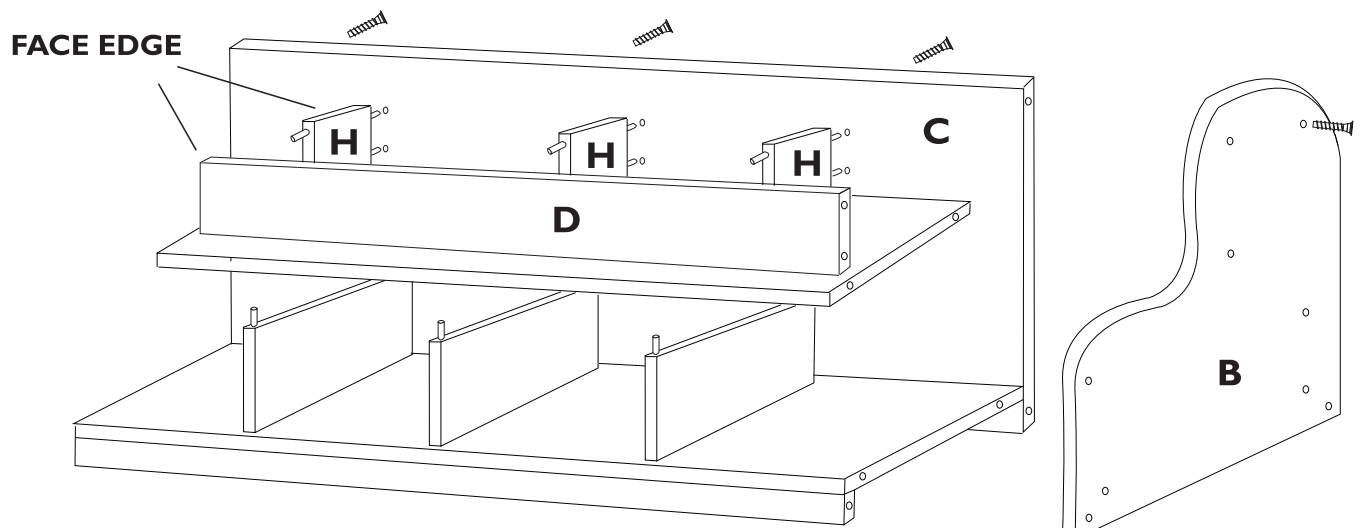**Secure Seat F to Back C using (3) Confirmat Screws.**

CAREFULLY STAND UNIT UPRIGHT

FACE EDGE

C

F

G   G   G

Step 7

Push Dowels in Book Divider H into Dowel Holes in Back C.

Locate Dowel Holes in Small Back D onto Dowels in Book Dividers H.

Secure End B using (9) Confirmat Screws. Repeat for End A.

FACE EDGE

H H H

C

D

B

YOUR UNIT IS NOW COMPLETE